

Innova Tool – Firmware Update Instructions

INTRODUCTION:

These instructions provide the procedure for updating the firmware version on your Innova tool using the RepairSolutions 2® software.

Note: This process may take up to 25 minutes

MINIMUM SYSTEM REQUIREMENTS

Windows®


- Windows 7, Windows 8.1, Windows 10
- 16 GB Disk Space
- 2GB RAM
- 1.0 GHz Intel or AMD Processor
- 1 USB Port
- Internet Connection

Macintosh®

- OSX 10.11.x and Newer
- 8GB Disk Space
- 2GB RAM
- 1.1 GHz Dual-Core Intel
- 1 USB Port
- Internet Connection

UPDATE INSTRUCTIONS:


1. Establish an internet connection.
2. Go to <https://www.innova.com/support>,
 - Select **OBD2 Diagnostics Tools** as the **Category**
 - Select your tool **Model**
 - Click **Search**
 - Click on **RepairSolutions PC** to begin the software download process
3. Install and launch the RepairSolutions 2® software on your computer.
4. Connect the tool using a USB cable.
5. If the following prompt appears, click **Update my tool now.**

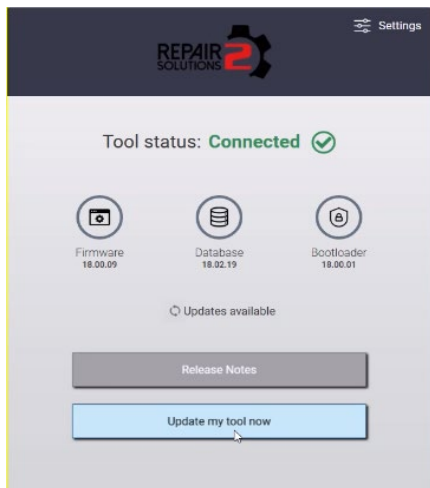


Note: If you are not prompted to update your tool, there is no update available at this time.

6. The tool firmware update process will begin.

Important: Please do not disconnect the tool, close the software, or turn your computer off while updating.

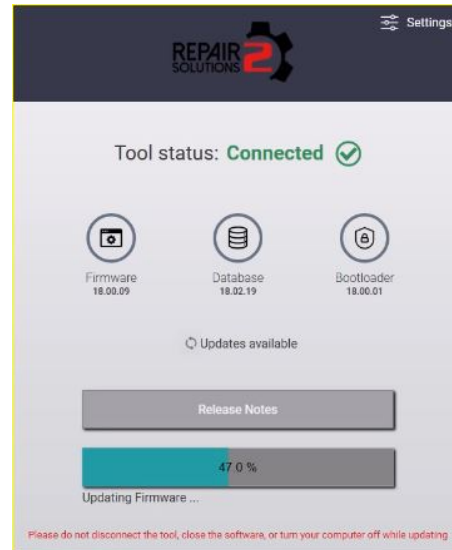

7. Once the update process is complete, the message on the prompt will change to **Update Complete.**

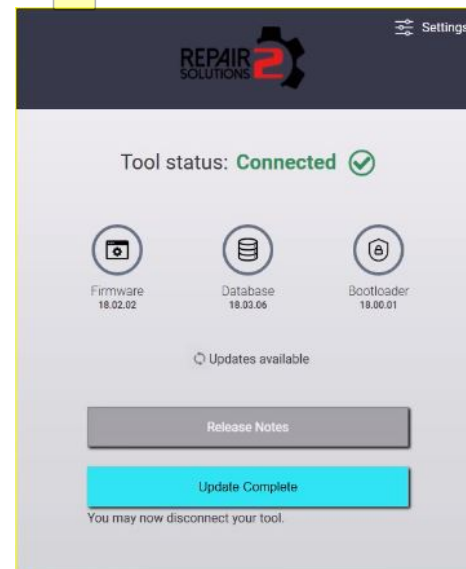

8. You may now safely disconnect your tool.